



1953 MERCURY - LINCOLN

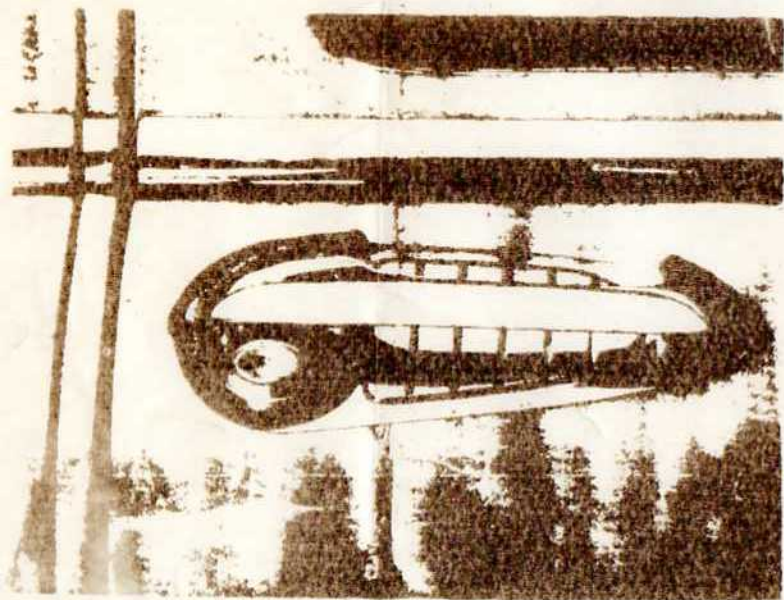

KIT-DOOR HANDLE SHIELD BH-18437-A
FORD MOTOR COMPANY

KIT - DOOR HANDLE SHIELD BH-18437-A

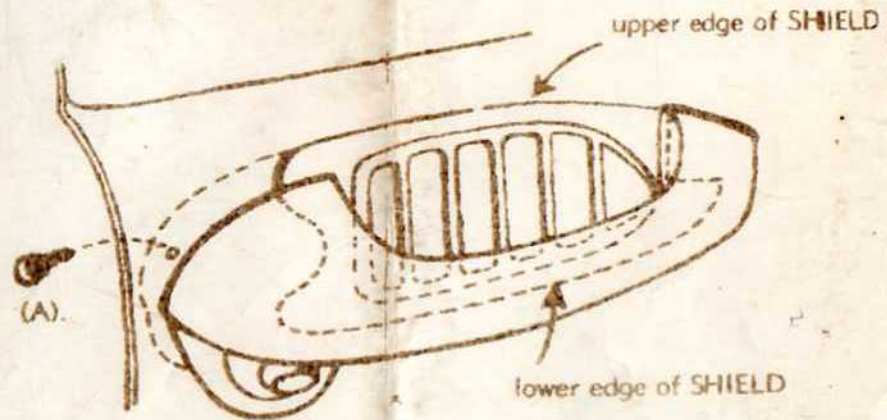

1. Remove screw (A) from inner side of door edge by pushing aside rubber strip.
2. Insert SHIELD under loosened door handle beneath rubber pads as shown.
3. After SHIELD is in position replace screw (A).