


1965
LINCOLN
CONVERTIBLE

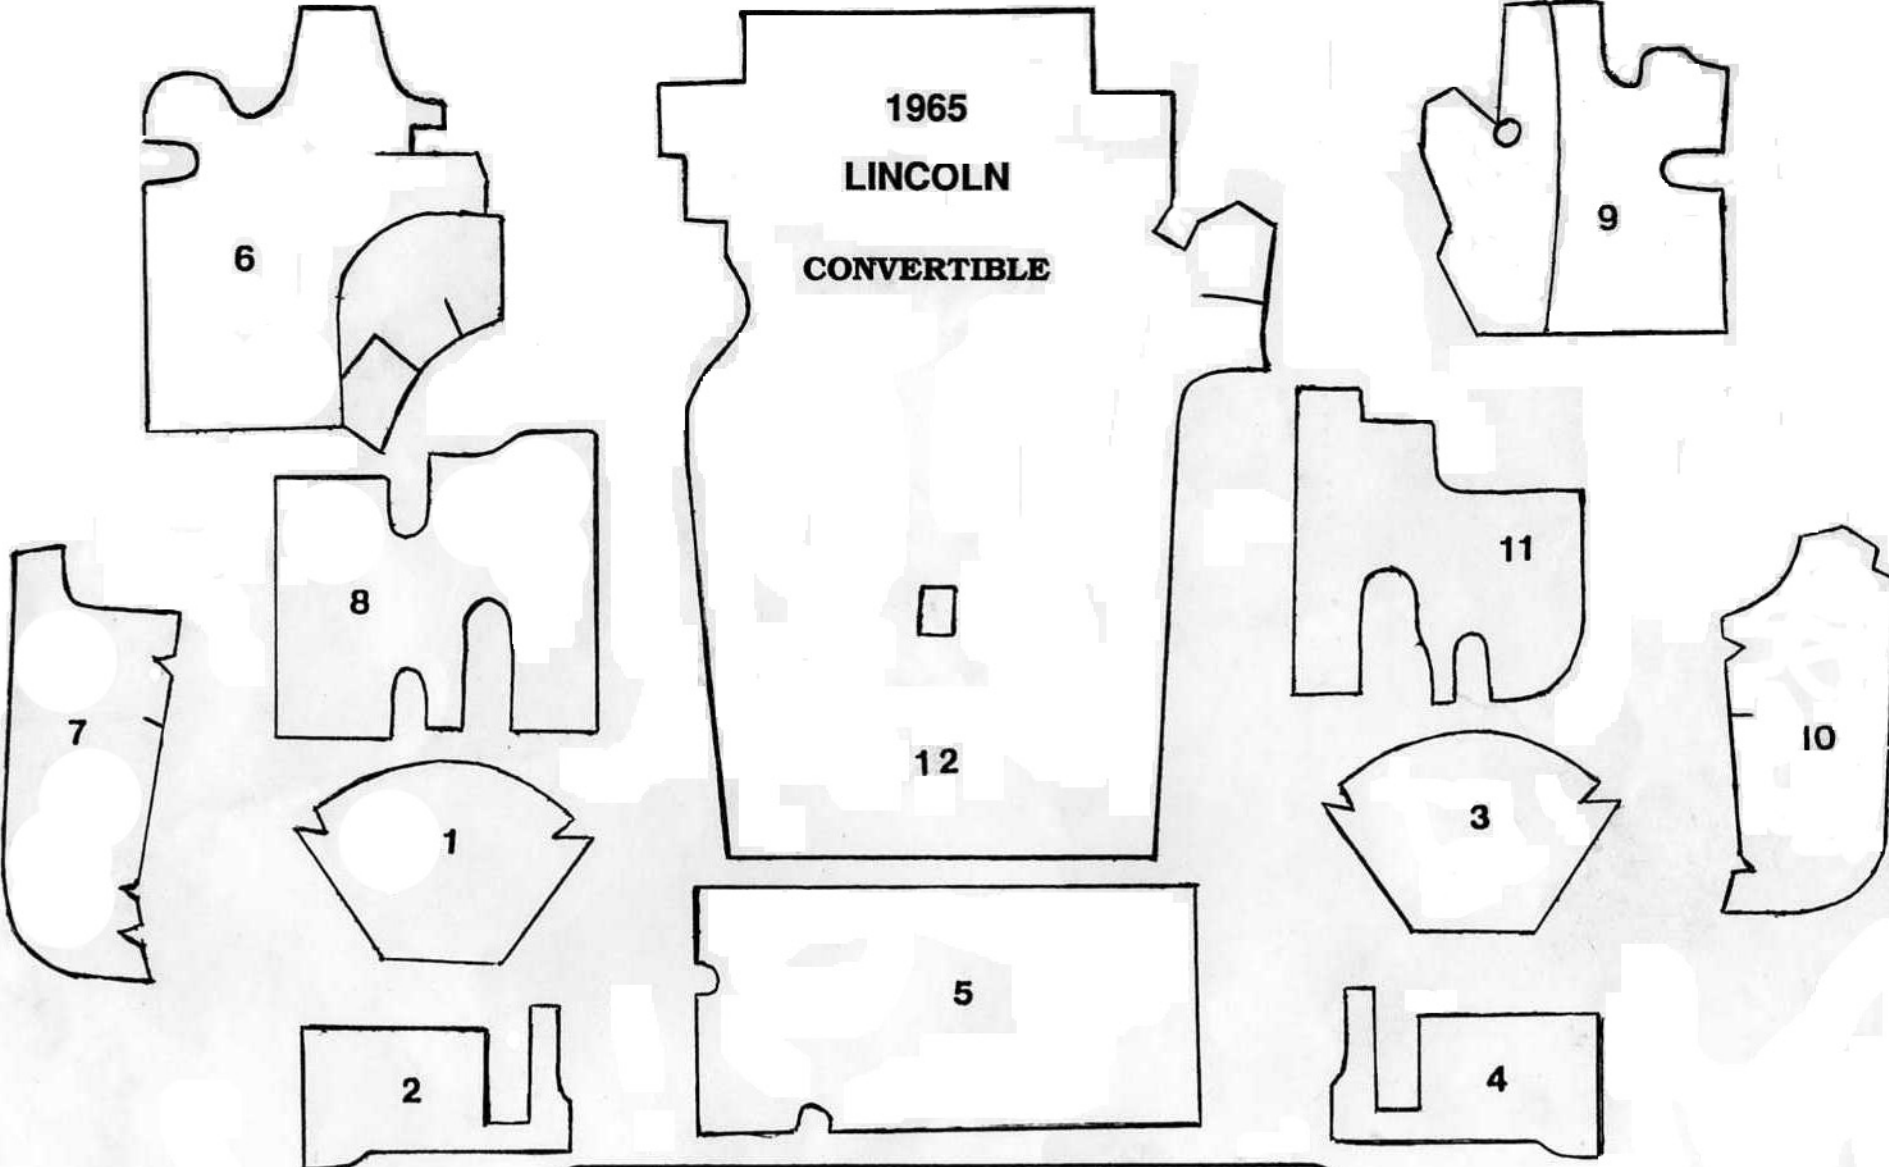

INSTALL IN NUMBER SEQUENCE

**FOR BEST RESULTS, USE #8080 3M SPRAY ADHESIVE,
AVAILABLE AT MOST AUTO PART STORES.**